

Rlux

Clara Back-Lit LED Panel Light 2'x4' **Installation Guide RECESSED Grid-CEILING** (For BLIT Frame Series)


RECESSED IN Grid-CEILING FRAME

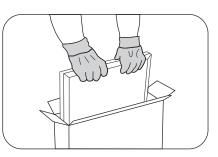


① Took the panel out of the box and protective bag. Remove the protective film.

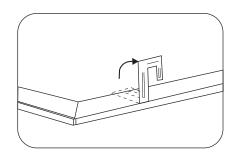


② Lift the mounting clip on the edge of panel.

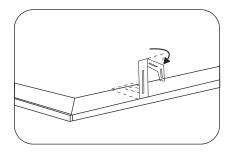


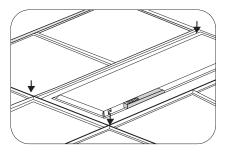


③ Turn the mounting clip head

④ Put the panel into grid ceiling.

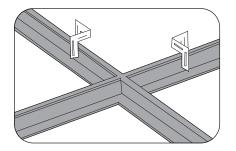

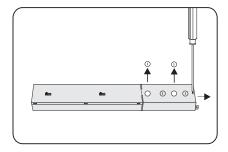

 ⑤ Check the clips well fasten to T-BARM (Main/Cross ceiling tee.)






BEFORE YOU BEGIN


Read these instructions completely and carefully

RISK OF ELECTRIC SHOCK • turn power off before inspection, installation or removal. • properly ground electrical enclosure.	G/AVERTISSEMENT RISQUE DE DECHARGES ELECTRIQUE • Coupez l'alimentation avant d''inspecter, installer au deplacer le lumina • Assurez-vous de correctement mettre a la terre le boiter d'almentation RISQUE D'INCENDIE • respectez tous les codes NEC et codes locoux.
 turn power off before inspection, installation or removal. properly ground electrical enclosure. 	Coupez l'alimentation avant d''inspecter, installer au deplacer le lumini Assurez-vous de correctement mettre a la terre le boiter d'almentation RISQUE D'INCENDIE
RISK OF FIRE • follow all NEC and local codes. • use only UL approved wire for input connections. Input wire minimum size is 18 AWG, and the output wire Minimum size is 24 AWG.	N'utilises que des fils aprotives par UL a IEC pour les entries/sorties de connexion taille minimum 18 AWG
Prepare Electrical Wiring Refer to PL Series LED Panel Specification for to the lamp electrical data info. 	Save These Instructions Use only in the manner intended by manufacturer. If you have any questions, contact the manufacturer.
Electrical Requirements The LED luminaire must be connected to the mains supply according to its ratings on the product label.	Do Not perforate the intergrity of the luminaire, only screw into the threaded mounting bracket holes located at the four corners of the fixture.
Grounding Instructions The grounding and bonding of the overall system shall be done in accordance to local electric code of the country where the luminaire is installed.	
Storage Info	
Environmental Operating Temperature Range	Max. 40°C
Environmental Rating	Dry or Damp location only

- inaire. on electrique

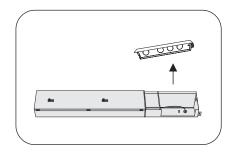

⑦ Open the knockout hole.

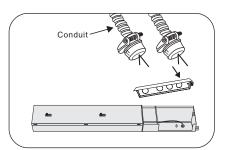



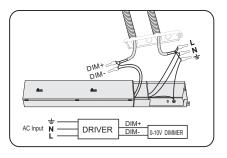



Image: one by one according to the wiring diagram. Please note that the wires passing through the entry holes need protective jackets, and pay attention to grounding.

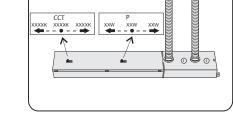

(8) Insert the cable into driver box.

0 Adjust the toggle switch, and customers can choose the wattage and color temperature of lamps on site according to their own needs.

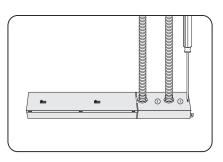

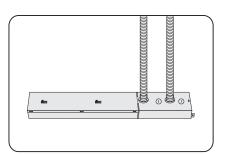

Fix the driver cover back.

① Complete.



Clara Back-Lit LED Panel Light 2'x4' **Installation Guide**

RECESSED Grid-CEILING

(For BLIT Frame Series)