



NOMA T8 TUBE – TYPE A&B - TWO END INPUT

INSTALLATION


1. Turn off the power to the light fixture at the breaker panel before installation
2. Open the diffuser from the light fixture.
3. Remove the fluorescent tubes Please dispose of these items properly as they contain mercury
4. Cut the wires shown as the diagram below.

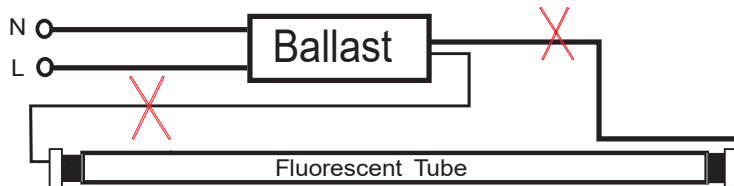

5. Make the new wire connect to branch circuit shown as the diagram below.
6. Replace the cover over the wiring channel..
7. Install the LED tubes, close the diffuser.

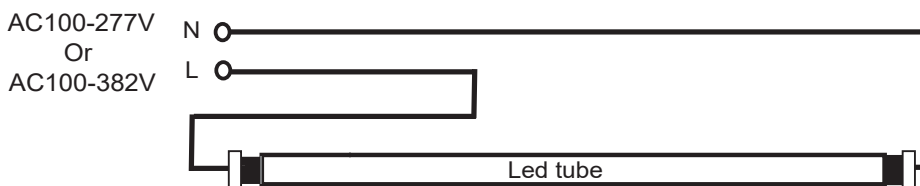

Internal Driver

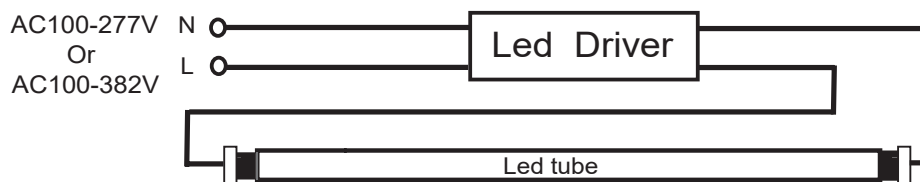

External Driver

8. Turn on the Power.
- Risk of fire. Led retrofit kit installation requires knowledge of luminaires electrical systems.
 - Risk of electric shock. Led retrofit kit installation requires knowledge of luminaires electrical systems.
 - Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
 - To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
 - This luminaires has been modified and can not longer operate the originally intended lamp.
 - To avoid potential fire or shock hazard, do not use this retrofit kit in luminaires employing shunted bi-pin lampholders.
 - If the lamp or luminaire exhibits undesirable operation (Buzzing,Flickering, etc), immediately turn off power, remove lamp from luminaire and contact manufacturer.